

Operation

Pull desired length of cord from reel. Tug slightly on cord to engage lock. To disengage lock, pull slowly on cord until clicking stops then allow cord to slowly retract back into housing.

WARNING! DO NOT OVERLOAD!

Check the amperage of the tool(s) or device(s) to be plugged into the cord reel plug/lamp.

Combined amp load and wattage on all outlets at any one time must not exceed cord reel ratings.

Do not exceed the following electrical ratings:

MODEL	MAXIMUM AMPERAGE RATING
48000	Bulb Rating: 75W A-type bulb. Electrical Rating: 10A/125V/1250W
48002	Bulb Rating: 13W fluorescent bulb. Electrical rating 10A/120V/1200W
48004	Electrical rating: 13A/125V/1625W
48005	Bulb Rating: 75W A-type bulb. Electrical Rating: 7A/125V/875W
48006	Electrical Rating: 13A/125V/1625W (combined amp load)
48021	Bulb Rating: 13W fluorescent bulb. Electrical rating 7A/120V/840W
48022	Electrical rating: 7A/125V/875W

Circuit Breaker Operation

(Models with circuit breaker)

Circuit breaker will trip if unit is overloaded. If circuit breaker trips, remove overload, turn switch located in handle to "OFF" position, wait two minutes, then reset by turning switch to the "ON" position. If unit continues to trip when load is plugged in, the tool or appliance you are attempting to plug in may be exceeding the amp rating or may be defective and require repair by a qualified electrician.

Important Safety Instructions

(Models with 3-prong plug)

This cord reel is intended for use only with 3-wire grounded outlets. It is equipped with a POLARIZED plug and is intended to be mated with a 3-wire receptacle in only one way. DO NOT attempt to defeat this safety feature by removing the ground pin. The receptacle on lamp or plug is POLARIZED and intended to mate with a polarized plug in only one way.

(Models with 2-prong plug)

This product has a POLARIZED plug (one blade is wider than the other) as a safety feature. This plug will fit in a POLARIZED outlet one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to defeat this safety feature.

Questions?
Call Woods Consumer Helpline: 1-800-447-4364



Coleman Cable Inc.
Waukegan, IL 60085
Printed in China

IllWoods®

Cord Reel Instruction Manual

Read all instructions before using this device.

Save these instructions.

DANGER!

- Electrical cord reels can be hazardous!
- Misuse can result in fire, damage and death by electric shock!
- For indoor use only.
- Fully extend cord before using outlet.
- For use with 110-125V, 60Hz circuits only.
- Do not allow lamp to lay on floor.
- Do not use this device where explosion-proof cord reels and/or lamps are required.
- Do not use this device under or around vehicles where explosive fumes and/or liquids may be present.
- Do not use in wet location. Do not immerse the reel, cord or plug/lamps into water or other liquids.
- Do not overload (see electrical ratings). Pull entire length of cord from reel when using outlets on lamps or plugs.
- Do not use extension cord between the cord reel and the wall outlet.
- Do not allow cord to retract by itself, as damage to cord end fittings may occur from excessive rewind speed.
- Do not use solvents (gasoline, paint thinner, etc.) to clean any part of this device (see how to clean in "Maintenance" section).
- Always disconnect power to this cord reel when not in use or when changing lamps.

WARNING: This product contains chemicals, including lead, known to the State of California to cause [cancer, and] birth defects or other reproductive harm.

Wash hands after handling.

ADVERTENCIA: Este producto contiene químicos, incluyendo plomo, que según las regulaciones del Estado de California pueden causar [cáncer y,] defectos congénitos y daños al sistema reproductivo. **Lávese las manos después de usar.**

Installation Instructions

Your cord reel is designed to be used three different ways:

- 1) Ceiling Mount
- 2) Wall Mount
- 3) Free Standing Floor Operation


Ceiling Mount

360 degree rotation (see figure 1)

DANGER!


Do not rely upon drywall or paneling alone to support weight of cord reel. Attach only to wooden studs, joists or other similar frame structures.

1. Select location within two feet of an electrical outlet.
2. Locate a ceiling joist (use stud finder or other suitable method) and screw hanger hook through ceiling and into joist.
3. Hang cord reel on hanger hook.
5. Close hanger hook with pliers to prevent cord reel from coming off.
5. Adjust cord stop ball so plug/lamp hangs at the desired length when cord is fully retracted.

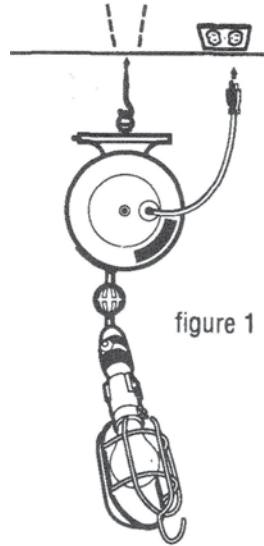

Wall Mount

1. Locate a wooden stud within two feet of an electrical outlet.
2. Securely attach bracket to stud using the three screws provided (see figure 2).
3. Insert pin located on base of cord reel into bracket hole.
5. Rotate cord reel up until hole in top of bracket lines up with hole in cord reel base.
Insert L-shaped pin completely through holes to secure cord reel to the bracket. The cord should exit the cord reel towards the bottom side of the housing.
5. Adjust cord stop ball so plug/lamp hangs at the desired length when cord is fully retracted.

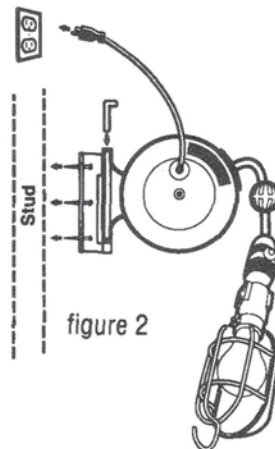

Maintenance

- 1) Remove dirt and grime as soon as it accumulates on reel and cord by using a soft, damp cloth, being careful not to wet the receptacles or plug/lamp. Never immerse any part of the unit in any solution to clean. DO NOT USE solvents such as gasoline, paint thinner, etc. to clean unit.
- 2) Keep cord clean to assure smooth automatic retraction. Simply pull the cord to its full length and allow to retract through a dampened cloth. Operation can also be enhanced by sprinkling the cord with talcum powder.

Relamping Instructions for Fluorescent Lamps

(Models with fluorescent lamps)

WARNING!

Unplug unit from electrical outlet!

Please use gloves and eye protection while changing lamp to prevent injury from possible broken glass.

1. Remove (2) screws securing clear tube to handle.
2. Grasp clear tube gently and pull tube away from base handle.
3. Remove lamp from base by gently pulling upwards.
5. Install new lamp into 2-pin holes located in base.
5. Re-install clear plastic tube by pushing into base handle making sure to align screw holes until firmly locked in base.
6. Re-install (2) screws.

Guard Assembly

(Models with incandescent trouble light)

CAUTION!

Unplug unit while attaching guard. Allow bulb to cool sufficiently before handling. Use gloves and eye protection in the event glass breaks!

1. Attach lamp guard to handle using screw(s) supplied.
2. Align guard to contact brass grounding strap on handle.
3. Tighten screw(s) securely.